



time machine ramp is probably not aligned properly in the up position. When in the up position the ramp link (black piece), and the lifter needs to be inline. This can be adjusted in the Ramp adjustment's menu, and the up position value can be adjusted. Move the value up or down until the link is inline with the lifter. This should make the ramp mechanically locked in the up position and the ramp won't move.

- Go into the Diagnostics menu and select the Game specifics test
- Select the "RAMP" lift ramp test.
- Press the start Button and adjust the ramp link and verify it is inline with the motor crank.

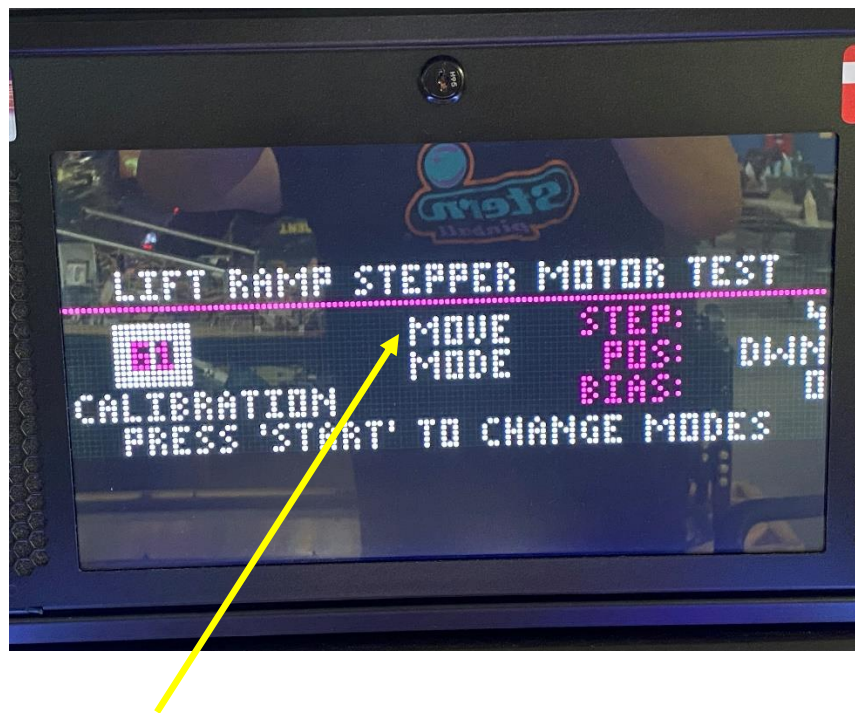

Verify that you press the START button and this will change the “MOVE” command and switch it over to the “ADJUST” command.

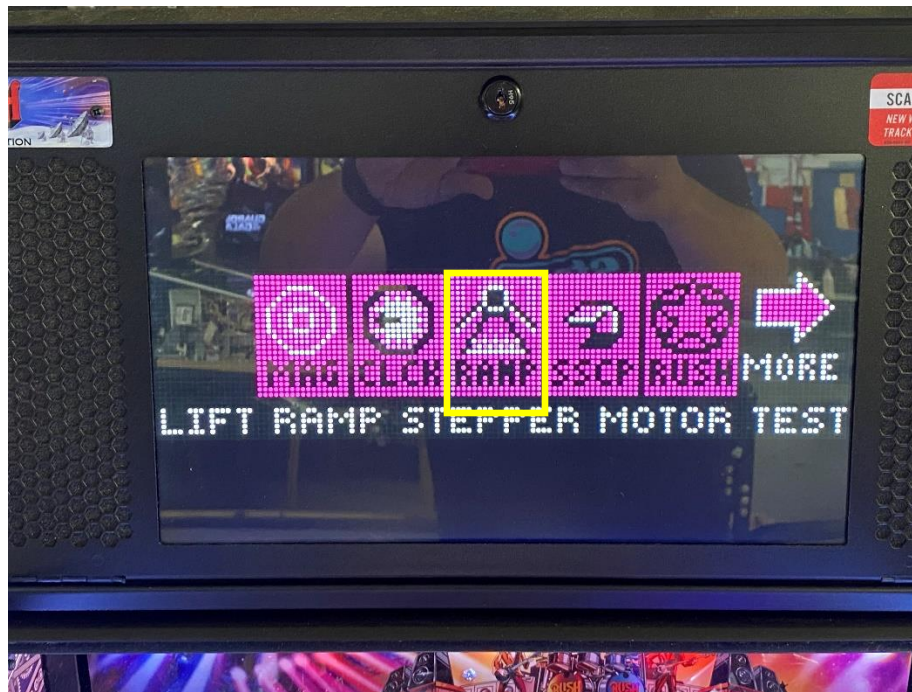